



# Addendum for Programming 10 button Prime Model

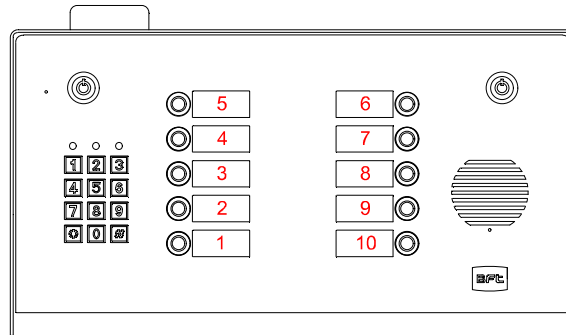

Please note the button positions above when programming numbers for the intercom to dial as follows..

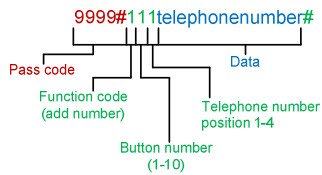

TIP...

111 = Button 1, Tel number 1. 121 = Button 2, Tel number 1.  
112 = Button 1, Tel number 2. 122 = Button 2, Tel number 2.  
113 = Button 1, Tel number 3. 123 = Button 2, Tel number 3.



The phone image shows an example of a number being stored and the reply sent by the unit to confirm OK.

Up to 4 numbers can be sent in a single SMS. The pass code only needs entered at the beginning of each message, and then each new command string is separated by #.

E.g. 9999#111firstnumber#112secondnumber#113thirdnumber#